

解圖

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are numbered 1 through 25. The assembly is shown in a disassembled state to show the relationship between parts. Key components include a top cover (1), a base housing (2), a motor unit (3), a fan (4), a pump head (5), a motor housing (6), a fan housing (7), a pump housing (8), a motor housing (9), a fan housing (10), a pump housing (11), a motor housing (12), a fan housing (13), a pump housing (14), a motor housing (15), a fan housing (16), a pump housing (17), a motor housing (18), a fan housing (19), a pump housing (20), a motor housing (21), a fan housing (22), a pump housing (23), a motor housing (24), and a fan housing (25). The diagram shows the assembly sequence from the base housing (2) up to the top cover (1), and the motor unit (3) and fan (4) assembly. The pump head (5) is shown as a separate component. The motor housing (6) and fan housing (7) are shown as separate components. The pump housing (8) and motor housing (9) are shown as separate components. The fan housing (10) and pump housing (11) are shown as separate components. The motor housing (12) and fan housing (13) are shown as separate components. The pump housing (14) and motor housing (15) are shown as separate components. The fan housing (16) and pump housing (17) are shown as separate components. The motor housing (18) and fan housing (19) are shown as separate components. The pump housing (20) and motor housing (21) are shown as separate components. The fan housing (22) and pump housing (23) are shown as separate components. The motor housing (24) and fan housing (25) are shown as separate components.


7

保養手冊

適用機型:DB60/80

★注意：施行以下保養前，請確保產品為斷電狀態，避免觸電危害。

1. 清潔進氣過濾棉（保養週期:建議半年一次）
- E. 鬆脫進氣蓋螺絲。
- F. 取下進氣蓋與進氣過濾棉。
- G. 以高壓氣流或純淨水清潔風乾。
- H. 將進氣過濾棉置回，並組合進氣蓋，並以進氣蓋螺絲鎖附固定。

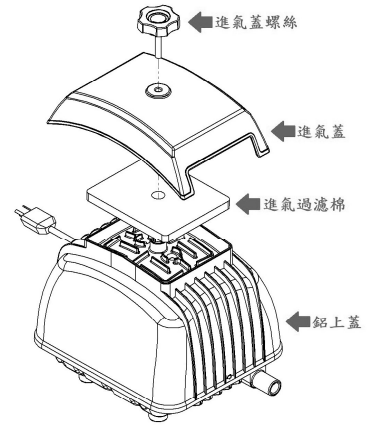


附圖一


★以上清潔進氣過濾棉作業要點可參考附圖一。

2. 震動膜片更換（保養週期:建議每年一次）
- H. 鬆脫鋁上蓋螺絲，取下鋁上蓋。
- I. 鬆脫氣室上蓋螺絲，鬆脫出氣管，取下舊氣室上蓋。
- J. 鬆脫止滑螺帽，取下舊氣室下蓋。
- K. 更換新氣室下蓋，並確認震動膜片與氣室下蓋緊密接合與磁石安裝位置。
- L. 使用新止滑螺帽將震動膜片與磁石鎖附固定。（建議鎖附扭力:8.5~9.5kg/cm²）
- M. 組合新氣室上蓋，並以氣室上蓋螺絲鎖附固定，組合出氣管。
- N. 組合鋁上蓋，並以鋁上蓋螺絲鎖附固定。

★以上震動膜片更換作業要點可參考附圖二與附圖三。

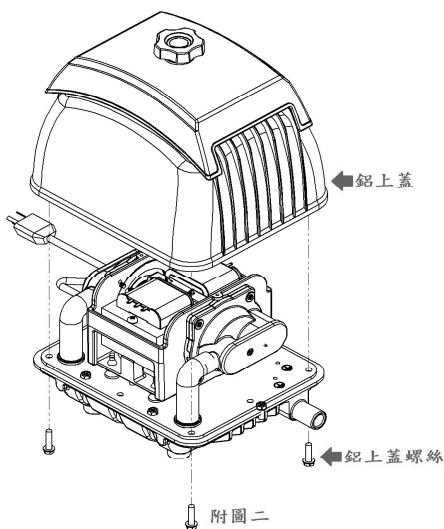

附圖二

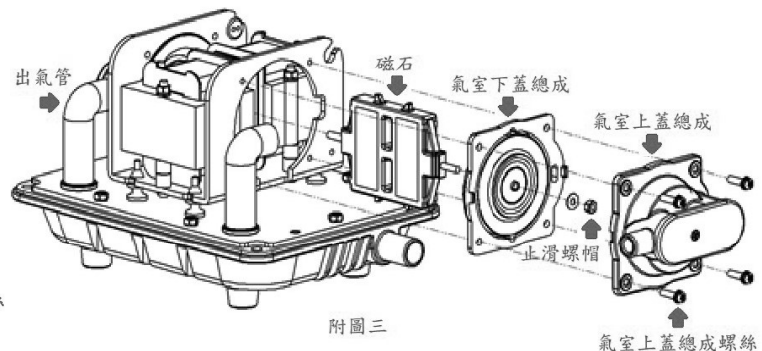

附圖三